

SAMSUNG CLP 600 CARTRIDGE REMANUFACTURING INSTRUCTIONS







GEAR-SIDE VIEW

+55-11-4822-3033

+55-11-4822-3353





+34-93-757-1335 +34-93-741-4166

JAPAN +81-3-44-55-2789 +1 310-838-7294

CHINA +8610 6297 6428 +8610 6297 9584






+54-11-4571-2388 +54-11-4574-3706


11124 Washington Blvd., Culver City, California U.S.A. 90232 • techsupport2@uninetimaging.com All Trademark names are property of their respective owners. Product brand names mentioned are intended to show compatibility only. Uninet Imaging does not guarantee or warrant downloaded information.

© 2006 Uninet Imaging Inc.

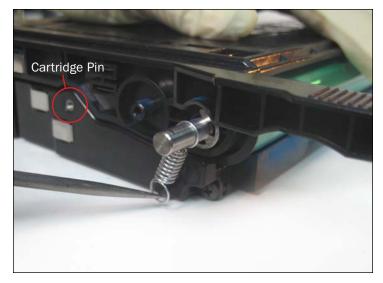

SEPARATING THE CARTRIDGE SECTIONS

1. Remove the tension spring that is attached to the contact end plate and drum axle.

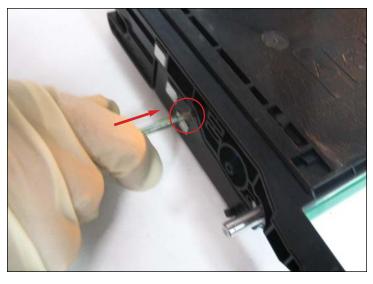

REMOVING THE PINS

2. Insert a small metric screw into the cartridge pin. Turn clockwise until the screw has a tight hold on the pin, then pull the pin out.




3. Pin removed.



4. Use the same procedure for the opposite pin.




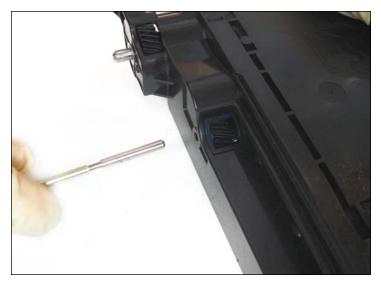

5. Pin removed.



6. Separate the two halves as shown.

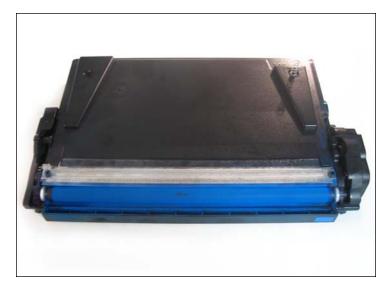

DISASSEMBLING THE TONER CARTRIDGE 7. Toner cartridge front view




REMOVING THE CONTACT END PLATE 8. First, remove the end plate by removing the two screws (shown) that hold it in place.






9. End plate removed.

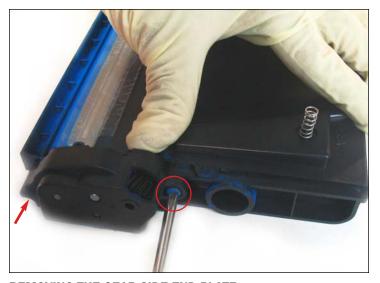

REMOVING THE GEAR-SIDE END PLATE 10. Remove the two screws that hold the end plate in place. This will allow access to the gears inside. Remove the first screw from the area shown.

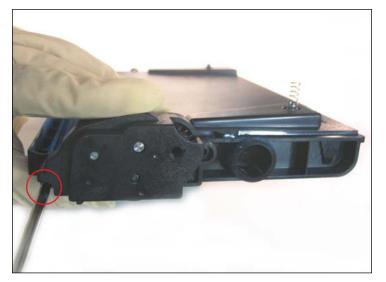

11. Remove the second screw from the area shown.

NOTES






REMOVING THE GEARS 12. Remove the gears.



13. Gears removed.




GEAR-SIDE SUPPORT PLATE REMOVAL 14. Locate the gear-side support plate (shown) and remove the screws that hold it in place.

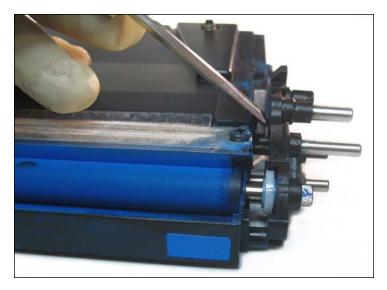


15. Using a flat head screwdriver, pry the loosed plate away from the cartridge to remove it completely.




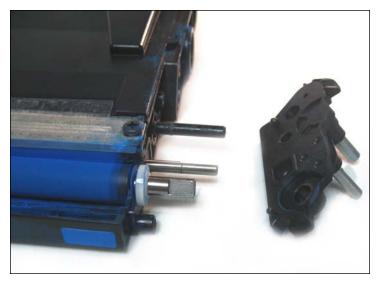

16. Gear-side support plate (shown) removed.

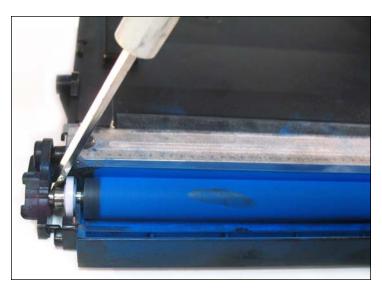

CONTACT-SIDE SUPPORT PLATE REMOVAL 17. Remove the contact-side support plate in the same manner as in the previous steps (14-16).

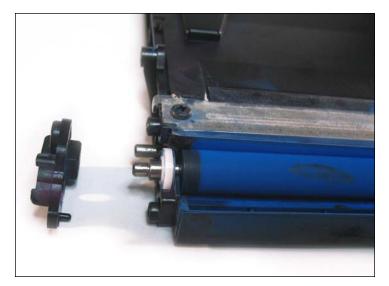

18. Contact-side support plate (shown) removed. You are now ready to remove the developer roller.



19. Remove the developer roller as shown.






20. Locate the fill plug on the gear-side of the cartridge. Using a pair of pliers, carefully pull it out.

Clean cartridge and components thoroughly using compressed air.

Refill new toner. Reassemble hopper, and set aside.

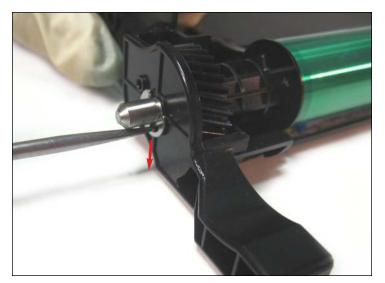

UNLOCKING THE OPC DRUM

22. Locate the "C"clip (shown) that holds the OPC drum in place on one side. Use a small flat head screwdriver or straight hook tool to draw the "C" clip out.




DISASSEMBLING THE DRUM UNIT 21. Drum unit shown.




23. "C" clip (shown) removed.




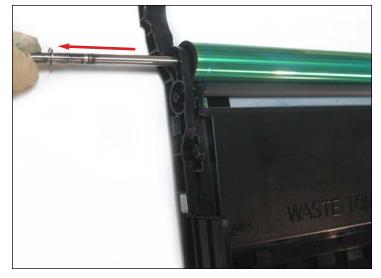


REMOVING THE DRUM AXLE 24. Pull out the drum axle through the opposite side as shown.

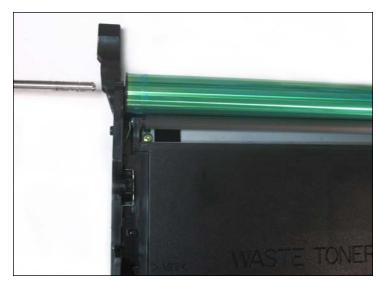

25. Follow through until the axle is completely removed.

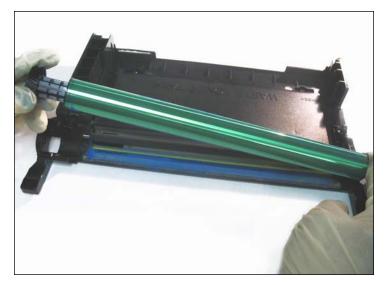


REMOVING THE OPC DRUM 26. Remove the OPC drum as shown.

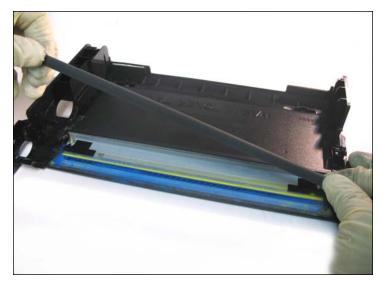


REMOVING THE PCR 27. Remove as shown.



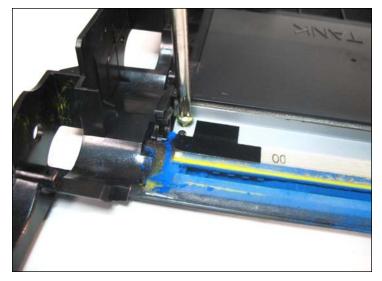

REMOVING THE WIPER BLADE

28. First, remove the two screws from both ends of the wiper blade.

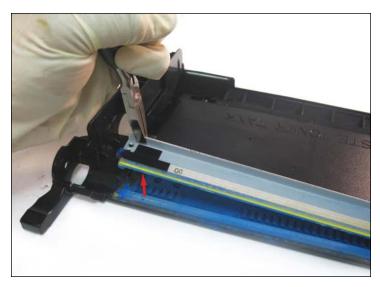


29. Using a pair of pliers, grip and remove the wiper blade as shown.



30. Clean thoroughly and reassemble the drum unit.

NOTES




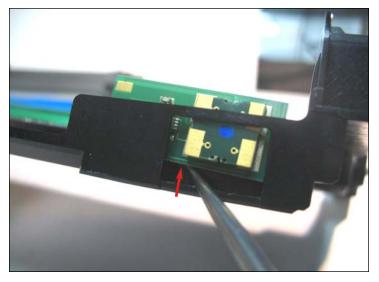

OEM CHIP REPLACEMENT

32. Just prior to joining the drum unit and toner hopper, you must replace the OEM chip located at the rear of the drum unit.

Using a small flat head screwdriver, pry the chip upward as shown.

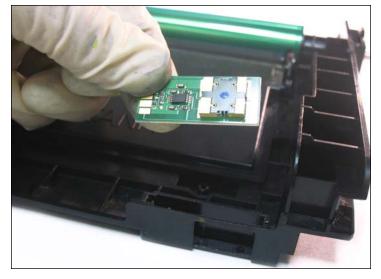

33. Remove the OEM chip and replace it with a new aftermarket one.

Join the cartridge halves and test the cartridge.

NOTES

